


# FITTING INSTRUCTIONS

The Cabinet Lock can be fitted to:

- A) Cupboards, cabinets and lockers etc as a direct replacement for existing cam locks.
- B) It can also be easily fitted to cupboards and cabinets that do not have an existing locking device.

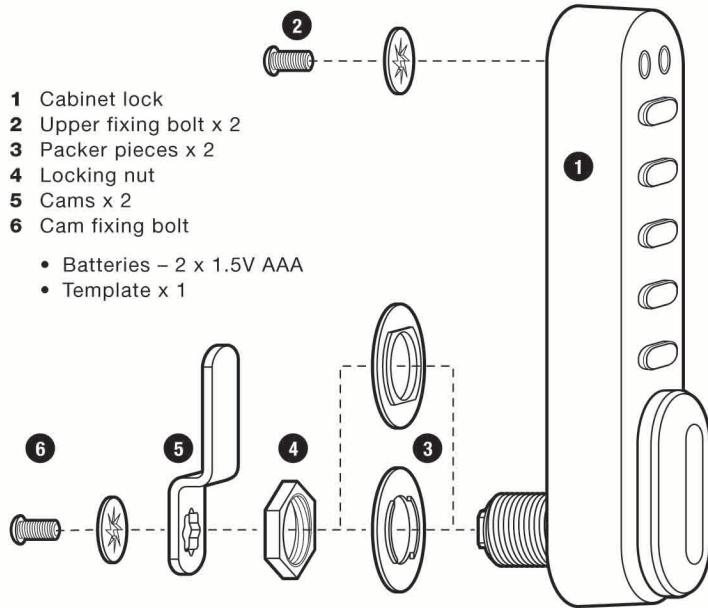

# SPECIAL NOTES

- Before installing the lock, load the batteries and familiarise yourself with the operation and programming.
- The handle will not turn until you enter the factory default Master Code 2,4,6,8.
- Please see programming guide to set your own codes.

# INSTALLATION GUIDE

## A) Replacing existing cam lock with the Cabinet Lock

- Step 1** Remove existing cam lock.
- Step 2** Place template over hole left by cam lock and mark upper fixing hole.
- Step 3** Drill the 6mm upper fixing hole.
- Step 4** Fit the Cabinet Lock to the door by passing the spindle through the 16mm hole.
- Step 5** If required, from the inside of the door, pass either of the packing pieces over the spindle to centralise the lock.
- Step 6** Now secure the lock by threading the large nut onto the spindle.
- Step 7** Fit one of the upper fixing bolts to suit your door thickness.
- Step 8** Tighten the lower fixing nut and upper bolt.