


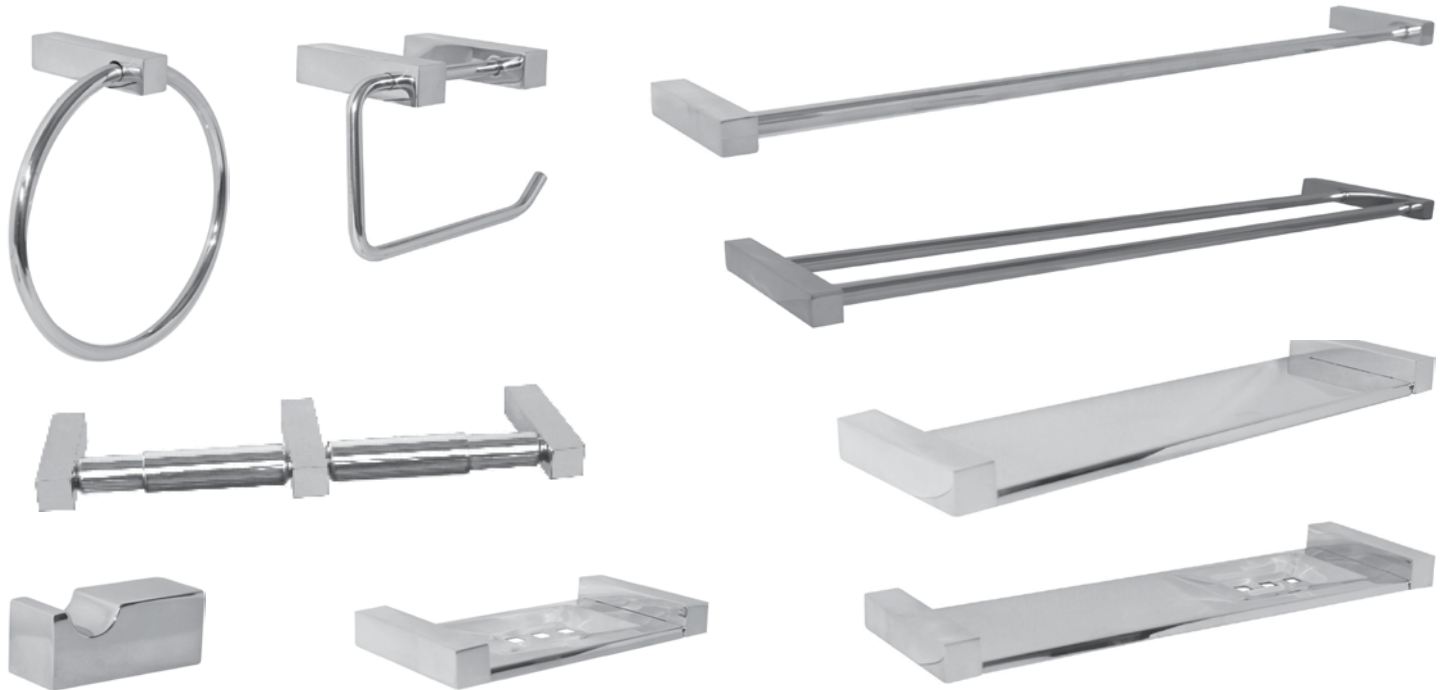


Paterson Series

This product may be subject to Building Code of Australia, local Council or other Regulatory Authority requirements with regard to location and height of installation in a bathroom/washroom, and is the responsibility of the installer to determine compliance if applicable.



INSTRUCTIONS

- Loosen Grub Screw (B) with Hex Key (C) from Mounting Support (A) and remove Ferrule (E).
- Mark mounting position for single Mounting Support.
Note: For dual Mounting Support application, ensure that height positions are parallel and Centre to Centre measurements (as detailed on the Lawson Series Product Information page) are correct.
- Drill hole(s) in marked position(s). Insert Hard Wall Anchor (F) or other suitable fastener appropriate to the wall being affixed to.
Note: Use Optional Dress Trim (G) for soft wall fixture.
- Insert Screw (D) into Ferrule (E) and tighten Screw (D) into Anchor (F) so that Ferrule (E) is secure to wall.
- Position Mounting Support (A) and push onto Ferrule (E).
Note: For dual Mounting Support application ensure that unit is parallel.
- Secure unit by tightening Grub Screw (B).

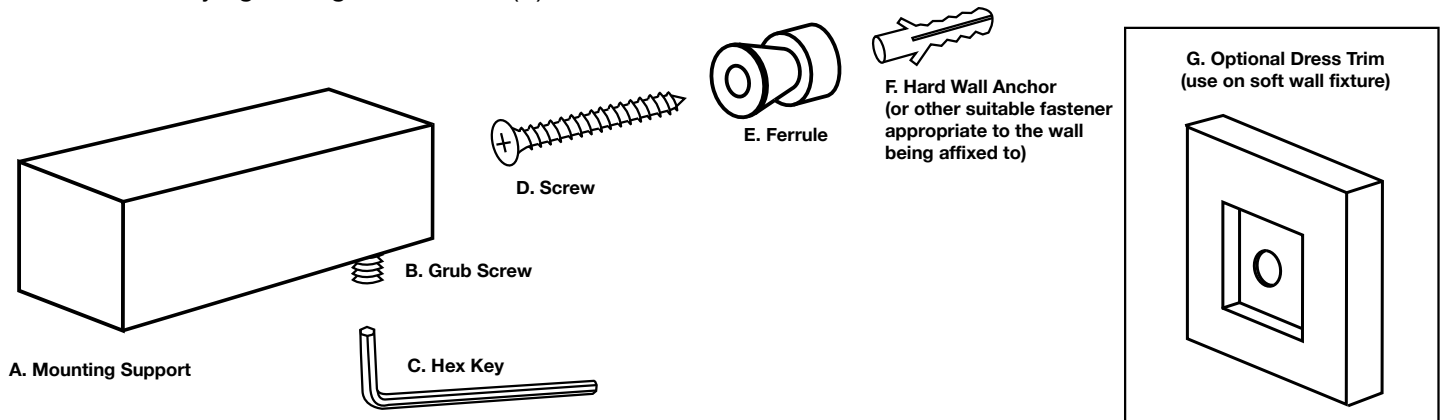

The photographs and line drawings of the products in this catalogue are representational only. Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.