

# MATERIAL SPECIFICATION & INSTALLATION GUIDE

## PRODUCT ITEM CODE & DESCRIPTION


### **ML 243 ~ CORNER SHOWER SHELF with SOAP DISH**



## MATERIAL SPECIFICATION / FEATURES:

#304 Grade 1.5mm Thick Stainless Steel Shelf in #3 Satin Finish / Front Shelf Fascia Edge Folded and Rounded / Soap Dish with Drain Slot

## DIMENSIONS:

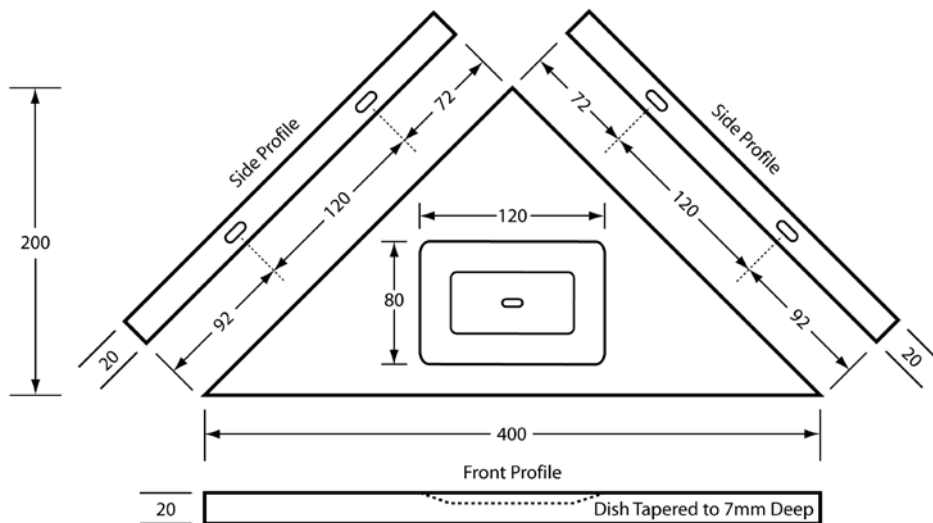

## INSTALLATION:

1. May be subject to Australian Building Code Regulations for height/location fixing and/or subject to placement as per architectural drawings, which in all cases is the responsibility of the installer re compliance.
2. Locate position/height in shower cubicle and mark using rear fixing holes, ensuring unit is level and even. Measure/Check Twice ... Drill Once
3. Drill holes, place a small amount of "wet area" rated silicone sealant to interface to inhibit water ingress into fixing area and loosely secure unit to cubicle wall surface using appropriate screws/wall plugs
4. Check level and tighten fasteners, wipe of any excess silicone and let cure for 24 hours. Before use.

*These units should only be installed by a competent tradesperson and Metlam Australia takes no responsibility for any damage to walls or fixtures due to incorrect installation.*