

## INSTALLATION GUIDE

### CODELOCKS HEADQUARTERS

Tel: +44 (0) 1635 239645  
Fax: +44 (0) 1635 239644  
sales@codelocks.co.uk  
www.codelocks.co.uk

Helpline, service & spares  
Freephone: 0800 393 405

### CODELOCKS INC US

Tel: +1 714 979 2900  
Fax: +1 714 979 2902  
sales@codelocks.us  
www.codelocks.us

Helpline, service & spares  
Toll free: 1.877.codelock

### CODELOCKS (Australia) PTY LTD

Tel: +61 2 9882 1009  
Fax: +61 2 9882 6030  
sales@codelocks.com.au  
www.codelocks.com.au

Helpline, service & spares  
Toll free: 1800 052 131




II-KL1200V-v1.0920

### A Replace existing cam lock with KitLock

- |        |  |        |  |
|--------|--|--------|--|
| Step 1 | Remove existing cam lock.<br>.....   | Step 5 | From the inside of the door select and fit appropriate spindle and cam using fixing bolt. Cut bolt to suit length of spindle plus approx. 10mm ( $\frac{3}{8}$ "). |
| Step 2 | Place the 16mm ( $\frac{5}{8}$ ") template hole over the hole left by the cam lock and mark the upper and lower fixing holes.<br>.....   | Step 6 | Before closing the door check the operation of the lock with Master and User Code.<br>.....  |
| Step 3 | Drill the two 6mm ( $\frac{1}{4}$ ") fixing holes.<br>.....  | Step 7 | If not changed already<br><b>CHANGE FACTORY SET<br/>MASTER AND USER CODE<br/>NOW!</b>  |
| Step 4 | Fit lock to door with gasket in place using fixing bolts. Cut bolts to correct length. Crimp several times with the cutting jaws of pliers, the surplus end should break off quite easily. Measured from beneath the bolt head, the length should be the door thickness, plus approx. 12mm ( $\frac{1}{2}$ "). |        |  |

### B New Installation

- |        |   |        |  |
|--------|---|--------|--|
| Step 1 | Place template on door and mark upper and lower 6mm ( $\frac{1}{4}$ ") fixing holes and 16mm ( $\frac{5}{8}$ ") spindle hole.<br><b>IMPORTANT NOTE:</b> Before drilling fixing holes, please ensure the position of the KitLock when fitted will allow enough clearance for selected cam to work. | Step 2 | Drill all three fixing holes.<br>.....   |
|        |   | Step 3 | Continue installation from step 4 to 7 from the Installation Guide section A). |

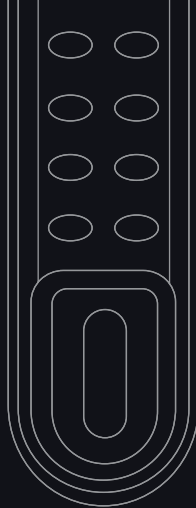

Installation Instructions  
Vertical

# KL1200

**KitLock**  
by Codelocks

Please read carefully:

- Before installing the lock, load the batteries and familiarise yourself with the operation and programming.
- The handle will not turn until you enter the factory default Master Code 11 33 55 77 or the User Code 22 44.
- Please see Programming Guide to set your new Master and User Codes and to set different functions on lock if required.

The KitLock can be fitted to:

**A** Cabinets, cupboards and lockers etc as a direct replacement for existing cam locks.

**B** It can also be fitted easily to cupboards and cabinets that do not have an existing locking device.

